
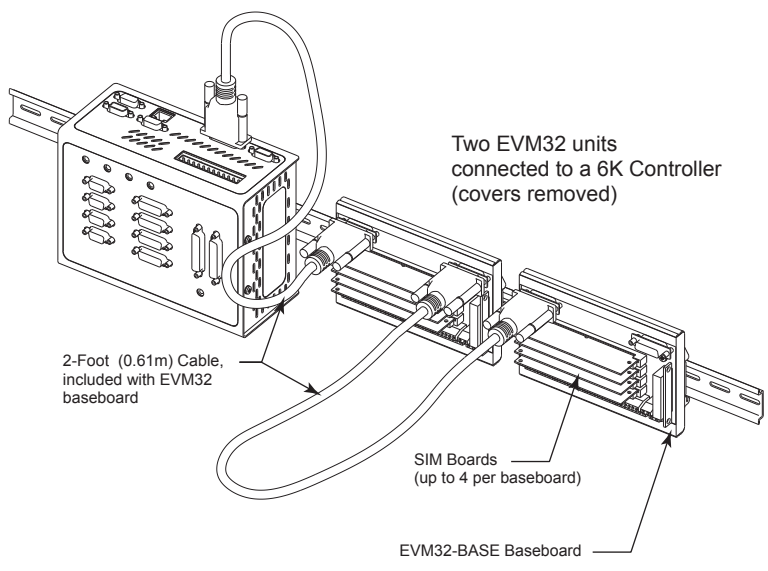


EVM32 – II

EVM32

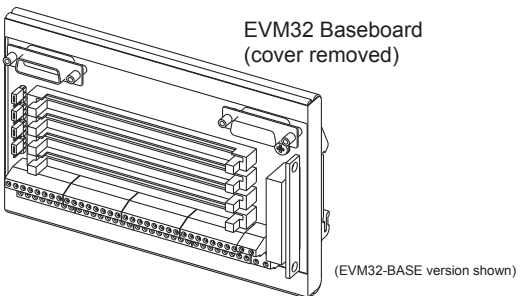

- Each EVM32 order includes:
- EVM32 Baseboard
 - Removable vented cover
 - Adhesive labels for the cover (to identify SIM configuration)
 - 2-foot (0.61m) cable for connection to the 6K controller
 - or connection to additional EVM32 units (see drawing at right)

- Additional EVM32 parts, ordered separately, include:
- SIM8-IN-EVM32 Digital input SIM board (8 inputs)
 - SIM8-OUT-NPN Digital output SIM board (8 outputs), sinking
 - SIM8-OUT-PNP Digital output SIM board (8 outputs), sourcing
 - SIM8-OUT-SSR Solid State Relay SIM board (8 outputs) **requires 6K OS rev 5.1**
 - SIM8-OUT-HCR High Current Relay SIM board (8 outputs), **requires 6K OS rev 5.1**
 - SIM8-AN-IN Analog (+/- 10V) input SIM board (8 inputs)
 - SIM8-AN-OUT Analog (+/- 10V) output SIM board (8 outputs) - **requires 6K OS rev 5.1**
 - 71-016949-02 2-foot (0.61m) cable, included with the EVM32 baseboard
 - 71-016949-100 100-foot (30.48m) cable for connection to 6K or other EVM32 units

Refer to the *6K Addendum* (88-017657-01) for EVM32 specifications, installation instructions, and programming information. See reverse for instructions to insert SIM boards into the EVM32 baseboard.
p/n 88-021032-01B



CAUTION
EVM32 SIM boards are static sensitive. Observe proper ESD handling precautions. **REMOVE POWER** to the EVM32 baseboard before installing or removing SIM boards.

SIM Board Color Codes:	
SIM8-IN-EVM32 (digital inputs) <input type="checkbox"/>	Red
SIM8-OUT-NPN (digital outputs, sinking) <input type="checkbox"/>	Blue
SIM8-OUT-PNP (digital outputs, sourcing) <input type="checkbox"/>	Blue
SIM8-OUT-SSR (solid state outputs) <input type="checkbox"/>	Blue
SIM8-OUT-HCR (solid state outputs) <input type="checkbox"/>	Blue
SIM8-AN-IN (analog inputs) <input type="checkbox"/>	Green
SIM8-AN-OUT (analog outputs) <input type="checkbox"/>	Black

SIM Board Insertion (observe notch orientation)

