

# EAB series

## Reservoir Equipment

# Mounting instructions

#### Threaded connection

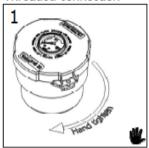

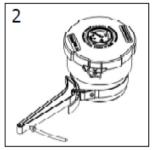

#### Instructions:

#### Step 1

- Screw on the EAB breather hand tight


#### Step 2

 Use a strap wrench to turn and tighten the EAB breather:

- For metal connectors: 90° ±5°

- For plastic connectors: 180° ±5°

# 6-hole fixing

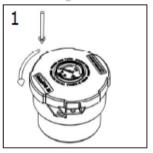



#### Instructions:

#### Step 1

 Push and turn counter clockwise to remove cover

#### Step 2


- Take out the element


#### Step 3

If needed: Place strainer and gaskets
Insert screws (6x) to affix EAB breather

#### Step 4

- Insert element and replace cover

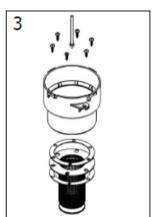

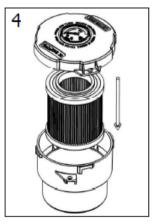




# **EAB** series

# Reservoir Equipment

# Element replacement instructions

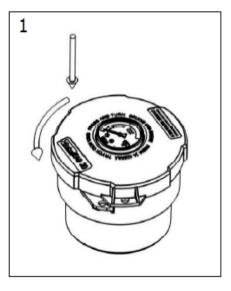

### Instructions:

### Step 1

 Push and turn counter clockwise to remove cover

# Step 2

- Take out element

# Step 3

- Insert new element and replace cover

