


User Information Guide

MANUAL NO. 102-6307-01
REV G
EFFECTIVE : 11/16/22
SUPERCEDES : 4/11/22



mSR100

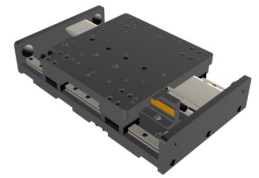

Important User Information

WARNING

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries, and authorized distributors provide product and/or systems options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these product systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuming that all performance, safety, and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

The information in the product manual, including any apparatus, methods, techniques, and concepts described herein, are the proprietary property of Parker Hannifin Corporation, Electromechanical Automation-Parker or its licensors, and may not be copied, disclosed, or used for any purpose not expressly authorized by the owner thereof.


Since Parker Hannifin Corporation, Electromechanical Automation-Parker constantly strives to improve all of its products, we reserve the right to change this product manual and equipment mentioned therein at any time without notice.

For assistance contact:

Parker Hannifin Corporation
Electro Mechanical Division
1140 Sandy Hill Road
Irwin , PA 15642

Ph 724-861-8200
800-245-6903


E-mail : emn_applications@parker.com
www.parkermotion.com

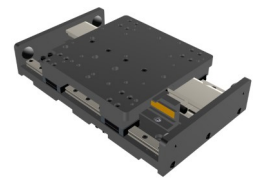

User Information Guide

MSR Series Product Manual

Introduction.....	5
General Information.....	5
Return.....	5
Repair.....	5
Unpacking and General Installation.....	6
Warnings and Precautions.....	7
Specification Conditions.....	8
Environmental Specifications	8
Mounting Requirements	8
Specifications.....	9
Part Number Nomenclature	12
Electrical Specifications.....	13
Standard Cabling and Wiring Diagrams.....	14
Dimensional Drawings.....	15
Assembly Diagram.....	16
Optical Encoder Limits.....	17
Magnetic Encoder Limits.....	18
Cable Carrier Mounting.....	19
Part and Serial Number Location.....	21
Caution and Warning Label.....	21
Maintenance and Life Expectancy.....	22
Spare Parts.....	22
Compliance Documents.....	23
Restriction of Hazardous Substances.....	23
CE Declaration of Conformity.....	24
Notes.....	25

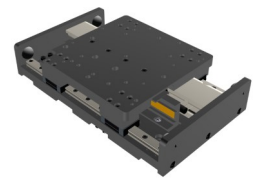

User Information Guide

REVISION NOTES

REV - INITIAL RELEASE 4/30/15

REV A CHANGED TRANSPORT TEMPERATURE ON PG 8 TO 0 TO +40 (WAS -20 TO +60)

REV B ADDED MOUNTING HOLE INFORMATION PAGE 15


REV C - p15 - Base Dowel Pin corrected to Slip Fit

REV D- UPDATE VALUES ON PGS 10-11

REV E - UPDATED ROHS 3 and CE CERTIFICATES

REV F - REVISED MSR100 E2 (0.1 OPTICAL) REPEATABILITY SPEC FROM 0.3 TO 0.4 UM

REV G- Updated Specification Conditions (Environment Specifications) Page 8.

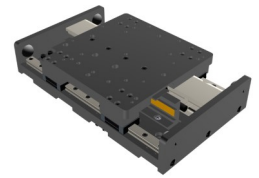

Introduction

The mSR is a linear positioner that fits a miniature foot print but delivers large value for customers looking to move a relatively light payload with high precision. All key components are integral to the unit - residing within the body of the stage to provide a clean looking, reliable, unobstructed package. At the heart of the mSR is an innovative, non-contact linear servo motors. This direct drive motor has been optimized for force, speed, and acceleration, to deliver outstanding performance and response. A variety of high precision non-contact linear encoders provides sub-micron resolution and repeatability. Selectable resolutions range from 10 nanometers to 1 micron. Precision linear 'square rails' provide extremely smooth - precise linear translation. Travel limit and home sensors are conveniently designed into the unit for easy adjustment over the entire travel of the stage. Each stage has been fitted with hi-flex cabling to address cable flexing concerns associated with multi-axis systems.

The mSR is intended to be integrated as a component into a machine with separate power electronics, and motion controller. As such the mSR is an incomplete machine, requiring proper power electronics to be added, as well as necessary machine guarding. The mSR is only rated for use in relatively clean environments moving relatively light payloads (≤ 12 kg).

General Information

Thank you for your interest in the products and systems offered by Parker Hannifin Electromechanical Automation Division. Our products and systems are recognized around the world for their functionality, performance, and reliability. Our products can be combined to form single or multi-axis systems with a full support of custom applications.

The intent of this guide is to provide general information for our MSR product line., including safety, basic maintenance and features. Not all of this information may be applicable to your product.

If you have any questions or challenges please call our factory support team at 800-245-6903.

It is the responsibility of the end user to ensure that equipment is installed and operated in accordance with both local and federal safety codes and guidelines.

The user must ensure that the attachment of work pieces/tools or other devices on the moving

Return Information


Returns

All returns must reference a "Return Material Authorization" (RMA) number. Please call your local authorized distributor or Parker Customer Service Department at 800-245-6903 to obtain a "RMA" number.

Repair Information

Out-of-Warranty Repair

Our Customer Service Department repairs Out-of-Warranty products. All returns must reference a "RMA" number. Please call your local authorized distributor or Parker Customer Service Department at 800-245-6903 to obtain a "RMA" number. You will be notified of any cost prior to making the repair.

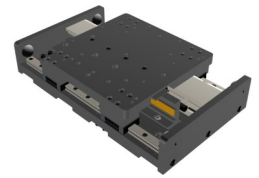

Unpacking and General Installation

Carefully remove the positioner from the packaging materials and inspect the unit for any evidence of shipping damage. Report any damage immediately to your local authorized distributor. Please save the shipping container for damage inspection or future transportation.

Incorrect handling of the positioner may adversely affect the performance of the unit in its application. Standard handling and lifting practices should be employed, product may be heavy.

Please observe the following guidelines for handling and mounting of your new positioner.

Proper mounting of the positioner is required to reduce risk of injury and provide optimal performance.

Positioners should be mounted to a flat, stable surface by using thru-holes, counter bored holes, or tapped holes on the base of the unit.

Unless otherwise specified, the standard installation of the linear drive is horizontal.

DO NOT allow the positioner to drop onto any surface. Dropping the positioner can generate impact loads that may result in flat spots on bearing surfaces or misalignment of drive components, drastically affecting the performance of the product.

DO NOT drill holes into the positioner. Drilling holes into the positioner can generate particles and machining forces that may affect the operation of the positioner. Parker will drill holes if necessary; contact your local authorized distributor.


DO NOT subject the unit to impact loads such as hammering, riveting, etc. Impact loads generated by hammering or riveting may result in flat spots on bearing surfaces or misalignment of drive components, drastically affecting the performance of the product.

DO NOT lift the positioner by cables or cable management system. Lifting positioner by cables or cable management system may affect electrical connections and/or cable management assembly. The unit should be lifted by the base structure only.

DO NOT expose positioner to mist, spray or submersion in liquids.

DO NOT disassemble positioner. Unauthorized adjustments may alter the positioner's specifications and will void the product warranty.

DO NOT transport a long axis without proper support as excessive deflection may occur.

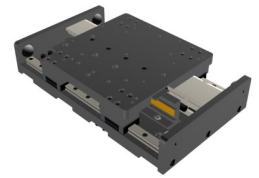

Warnings and Precautions



Hot Surfaces

DO NOT touch motor coils located in the positioner after high duty operation. Motor temperature may approach 60°C. The unit itself may become warm or hot to the touch.



Electrical Shock

DO NOT take apart or touch any internal components of the positioner while unit is plugged into an electrical outlet. SHUT OFF power before replacing components to avoid electrical shock.



High Magnetic Field

Unit may be HAZARDOUS to people with Pace Makers or any other 'magnetically-sensitive' medical devices. Unit may have an effect on 'magnetically-sensitive' applications.



Ferrous Materials

The positioner will NOT keep out small ferrous materials in applications with air born metallic particles. The customer must take additional precautions in these applications to prevent intrusion of these ferrous particles.



Vertical Operation

Depending upon your load and counter balance selection the carriage and load may drop when mounted vertically in power loss situations potentially causing product damage or personal injury.



General Safety

Because linear motors can accelerate up to 3 g's and operate at high speeds, and sometimes positioners move without warning, keep all personnel away from dynamic travel range of positioner. Product does have pinch areas where moving elements relative to each other come together.



Moving Cables

If the cables are to be moving, the use of high flex cabling is recommended to ensure long life .




Strain Relieve Electrical Components

All electrical components (such as motor, halls, encoders and limit/home switches) must be strain relieved. Failure to strain relieve electrical wires or cables may result in component failure and/or possible personal injury.



Pinch Points

Unit may have a pinch point because the top extends over the base of the table as well as moving elements relative to stationary elements. Proper care should be exercised.

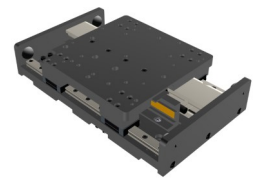

User Information Guide


Specification Conditions

Environmental Specifications	
Storage and Transport Temperature Range	-10 to +60 Degree C.
Storage and Transport Humidity Range	10 - 95% Non Condensing
Operation Temperature to Achieve Specifications	20 Degrees C +/- 1 degree C
Operation Temperature range for basic motion ¹	5 to 40 Degrees C.
Operational Humidity Range	10 - 95% Non Condensing
Cleanliness	Operating area is to be clean and free of particulation. Normal room dust is acceptable but heavy particulation can cause malfunctions and damage.

¹ Minimum to maximum continuous operating temperature range (with NO guarantee of any specification except motion)

Mounting Surface Requirements
<p>Proper mounting of the mSR is essential to optimize product performance. All specifications are based on the following conditions:</p> <ul style="list-style-type: none">• The positioner must be bolted down to a flat surface which supports the entire length of the base using all mounting holes provided• At a minimum for basic motion the positioner must be mounted to a flat, stable surface, with a flatness error less than or equal to 0.025mm/300mm, (specifications will be greatly varied from published specification with this flatness).• To meet catalog specifications the surface must have a flatness error less than or equal to 0.003mm/300mm for Standard grade and 0.001mm/300mm for Precision grade.

User Information Guide

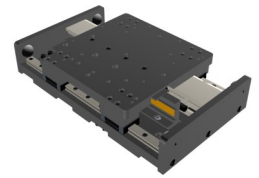

Specifications


Specifications		Units	25			50			100			150			200			250		
Travel		mm	LS			LS	LD	LS	LD	LS	LD	LS	LD	LS	LD	LS	LD	LS	LD	
Size (WxH)		mm	100 x 35			100 x 35			100 x 35			100 x 35			100 x 35			100 x 35		
Normal Load		kg	12			12			12			12			12			12		
Continuous Thrust		N	11	11	16.7	11	16.7	11	16.7	11	16.7	11	16.7	11	16.7	11	16.7	11	16.7	
Peak Thrust (Max)		N	33	33	50	33	50	33	50	33	50	33	50	33	50	33	50	33	50	
Duty Cycle		%	100			100			100			100			100			100		
Acceleration (Max– no load)		G	3			3			3			3			3			3		
Rated Bus Voltage		Volts DC	48			48			48			48			48			48		
Straightness & Flatness ¹	Standard grade	µm	±5			±5			±8			±8			±8			±10		
	Precision grade		±3			±3			±4			±4			±5			±5		
Carriage Mass		kg	0.34	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	
Stage Mass		kg	1.06	1.21	1.57	1.45	1.80	1.68	2.03	1.91	2.35	2.23	2.59							

		Units	300		350		400		450		500	
Travel		mm	LS	LD	LS	LD	LS	LD	LS	LD	LS	LD
Size (WxH)		mm	100 x 35		100 x 35		100 x 35		100 x 35		100 x 35	
Normal Load		kg	12		12		12		12		12	
Continuous Thrust		N	11	16.7	11	16.7	11	16.7	11	16.7	11	16.7
Peak Thrust (Max)		N	33	50	33	50	33	50	33	50	33	50
Duty Cycle		%	100		100		100		100		100	
Acceleration (Max– no load)		G	3		3		3		3		3	
Rated Bus Voltage		Volts DC	48		48		48		48		48	
Straightness & Flatness ¹	Standard grade	µm	±10		±12		±16		±20		±20	
	Precision grade		±5		±6		±8		±10		±12	
Carriage Mass		kg	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46	0.34	0.46
Stage Mass		kg	2.47	2.82	2.70	3.05	2.93	3.37	3.25	3.60	3.48	3.84

¹ Precision grade version stage mounted to granite surface, 0.01 micron optical encoder

Continuous Power	
Motor	Power (Watts)
LS Motor	57.6
LD motor	104.6



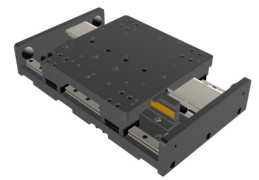

User Information Guide

mSR100 Specifications (Travel & Encoder Dependent)

Specification	Units	Travel (mm)											
		25 (LS)	50 (LS)	50 (LD)	100 (LS)	100 (LD)	150 (LS)	150 (LD)	200 (LS)	200 (LD)	250 (LS)	250 (LD)	

Magnetic Encoder - 1 Micron Resolution

Max. Speed	mm/s	1100	1500	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±5.0											
Positional Accuracy	µm	40	40	60	80	100	100	100	100	100	100	100	100

Optical Encoder- 1 Micron Resolution

Max. Speed	mm/s	1100	1500	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±2.0											
Positional Accuracy	µm	10	10	10	10	10	10	10	12	12	14	14	
Positional Accuracy (Slope Corrected)	µm	6	6	6	6	6	7	7	7	7	8	8	

Optical Encoder- 0.1 Micron Resolution


Max. Speed	mm/s	300	300	300	300	300	300	300	300	300	300	300	300
Bi-directional Repeatability	µm	±0.4											
Positional Accuracy	µm	9	9	9	9	9	9	9	11	11	13	13	
Positional Accuracy (Slope Corrected)	µm	5	5	5	5	5	6	6	6	6	7	7	

Optical Encoder- 0.01 Micron Resolution

Max. Speed	mm/s	30	30	30	30	30	30	30	30	30	30	30	30
Bi-directional Repeatability	µm	±0.2											
Positional Accuracy	µm	8	8	8	8	8	8	8	10	10	12	12	
Positional Accuracy (Slope Corrected)	µm	4	4	4	4	4	5	5	5	5	6	6	

BiSS-C Absolute Encoder - 0.05 Micron Resolution

Max. Speed	mm/s	1100	1500	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±0.4											
Positional Accuracy	µm	9	9	9	9	9	9	9	11	11	13	13	
Positional Accuracy (Slope Corrected)	µm	5	5	5	5	5	6	6	6	6	7	7	

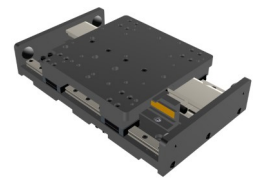

User Information Guide

Specification	Units	Travel (mm)									
		300 (LS)	300 (LD)	350 (LS)	350 (LD)	400 (LS)	400 (LD)	450 (LS)	450 (LD)	500 (LS)	500 (LD)

Magnetic Encoder -1 Micron Resolution

Max. Speed	mm/s	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±5.0									
Positional Accuracy	µm	60	60	60	60	60	60	60	60	60	60

Optical Encoder- 1 Micron Resolution

Max. Speed	mm/s	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±2.0									
Positional Accuracy	µm	16	16	18	18	20	20	22	22	24	24
Positional Accuracy (Slope Corrected)	µm	8	8	9	9	9	9	10	10	10	10

Optical Encoder- 0.1 Micron Resolution


Max. Speed	mm/s	300	300	300	300	300	300	300	300	300	300
Bi-directional Repeatability	µm	±0.4									
Positional Accuracy	µm	15	15	17	17	19	19	21	21	23	23
Positional Accuracy (Slope Corrected)	µm	7	7	8	8	8	8	9	9	9	9

Optical Encoder- 0.01 Micron Resolution

Max. Speed	mm/s	30	30	30	30	30	30	30	30	30	30
Bi-directional Repeatability	µm	±0.2									
Positional Accuracy	µm	14	14	16	16	18	18	20	20	22	22
Positional Accuracy (Slope Corrected)	µm	6	6	7	7	7	7	8	8	8	8

BiSS-C Absolute Encoder - 0.05 Micron Resolution

Max. Speed	mm/s	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000
Bi-directional Repeatability	µm	±0.4									
Positional Accuracy	µm	15	15	17	17	19	19	21	21	23	23
Positional Accuracy (Slope Corrected)	µm	7	7	8	8	8	8	9	9	9	9

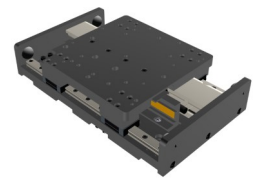

User Information Guide

Part Number Nomenclature mSR 100


Part
Number
Example:




- | | | |
|--|--|---|
| <p>① Series
MSR Series</p> | <p>⑤ Grade
P Precision (Optical, Sine/ Cosine, and Biss-C Absolute only)
S Standard (Magnetic Encoder only)</p> | <p>⑧ Home Sensor
H0 No home sensor (BiSS-C Absolute only)
H1 Home Sensor¹
¹Home sensor with M1 option
¹Index mark with E1/E2/E3 or SC options</p> |
| <p>② Size
100 100 mm wide profile</p> | <p>⑥ Motor
LS Ironless, single
LD Ironless, double (50 to 500 mm stroke only)</p> | <p>⑨ Limit Sensor
L0 No limit sensor (BiSS-C Absolute only)
L1 End-of-travel limit sensors</p> |
| <p>③ Drive Train
L Linear Motor Drive</p> | <p>⑦ Encoder
E1 1μ optical incremental
E2 0.1μ optical incremental
E3 0.01μ optical incremental
SC Sine/ Cosine
M1 1μ magnetic incremental
R1 0.05μ BiSS-C Absolute</p> | <p>⑩ Cable Options
CM03 No cable management 3 meter
CM13 Single cable carrier, 3 meter
CM23 Double cable carrier, 3 meter</p> |
| <p>④ Stroke Length (mm)
025 25 mm
050 50 mm
100 100 mm
150 150 mm
200 200 mm
250 250 mm
300 300 mm
350 350 mm
400 400 mm
450 450 mm
500 500 mm</p> | | <p>⑪ Other Options
X0 No options</p> |

User Information Guide

Electrical Specifications

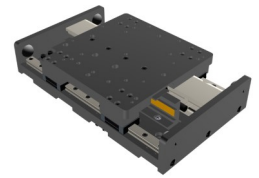

Motor Specifications	Units	3 Pole	5 Pole
		(LS Option)	(LD Option)
Magnetic Pitch	mm	40	40
Continuous Force ¹	N	11	16.7
Peak Force	N	33	50
Continuous Current ¹	A(rms)	1.2	2.18
Peak Current ^{2,3}	A(rms)	3.5	6.5
Voltage Constant ^{2,3}	Volts/m/s	7.7	6.3
Force Constant ²	N/A(rms)	9.4	7.65
Resistance ²	Ohms	6.3	2.82
Inductance ⁴	mH	1	0.5
Max Bus Voltage	VDC	48	48
Thermal Resistance	C/Watt	5.5	3.56
Winding Thermal Time Constant	Minutes	1.3	0.8
Motor Thermal Time Constant	Minutes	15	10

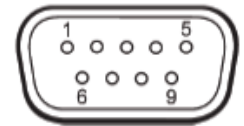



1 @ 25° C ambient, and winding temperature at 125° C

2 Measured line to line


3 Value is measured peak of sine

4 ±30% Line-to-Line, induction bridge measurement @ 1 KHz

Function	Color	Pin #
Motor Phase U	Red	1
Motor Phase V	Brown	2
Motor Phase W	Orange	3
PE Ground	Green/Yellow	4
Hall Power (+5Volts DC)	Black	5
Hall Ground	White	6
Hall 1	Yellow	7
Hall 2	Blue	8
Hall 3	Green	9

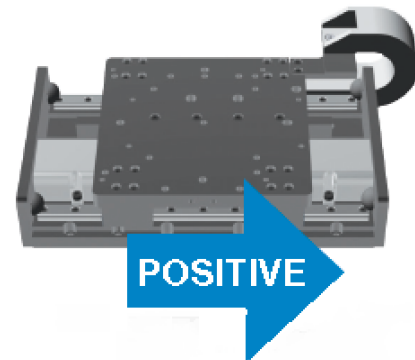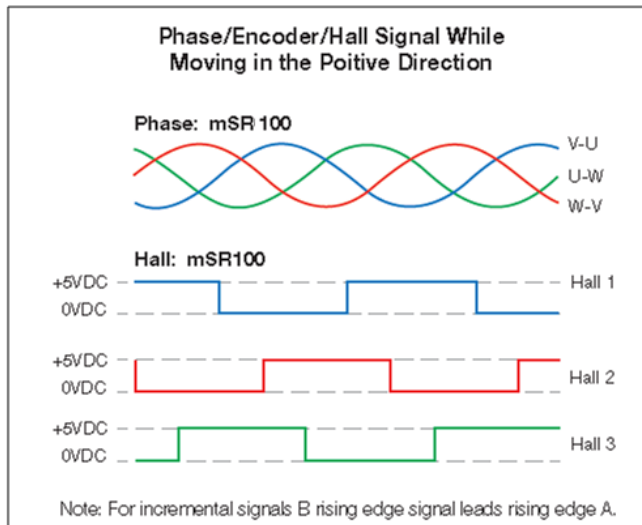


User Information Guide

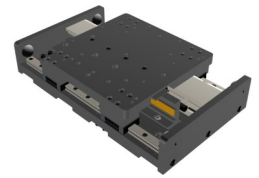

Optical Encoder

Function	Signal	Pin #
Power	5 Volts DC	8
	Ground	2,9
Incremental Signals	A+	14
	A-	6
	B+	13
	B-	5
Reference Mark	Z+	12
	Z-	4
Limits	Positive Limit	11
	Negative Limit	10
Setup	(Used in installation)	1
Error Output	NPN	3

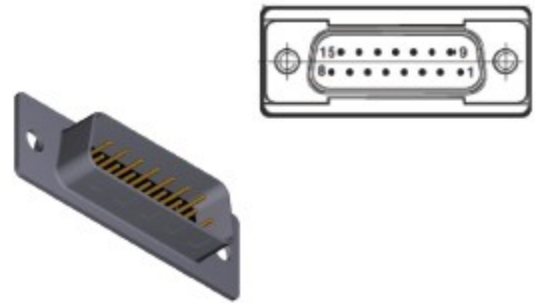

Sine Cosine Encoder

Function	Signal	Pin #
Power	5 Volts DC	4, 5
	0 Volts DC	12, 13
Incremental Signals	Cosine +	9
	Cosine -	1
	Sine +	10
	Sine -	2
Reference Mark	Z+	3
	Z-	11
Limits	Positive Limit	7
	Negative Limit	8
Setup	(Used in installation)	6
Error Output	NPN	14

Magnetic Encoder


Function	Signal	Pin #
Power	5 Volts DC	8
	Ground	9
Incremental Signals	A+	14
	A-	6
	B+	13
	B-	5
Reference Mark	Z+	12
	Z-	4
Limits	Positive Limit	11
	Negative Limit	10
Home	NPN	2
Error Output	NPN	3

BiSS-C Absolute Encoder





Function	Signal	Color
Power	5 Volts DC	Brown
	Ground	Green
		White
Serial Communications	MA+	Violet
	MA-	Yellow
	SLO+	Grey
	SLO-	Pink
Shield	Inner	Inner Shield
	Outer	Case



User Information Guide


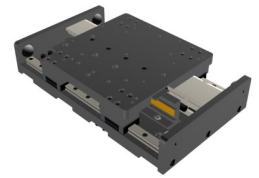


Dimensional Drawings - mSR100 - mm (in)

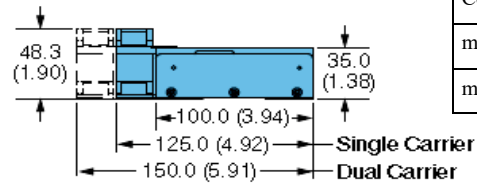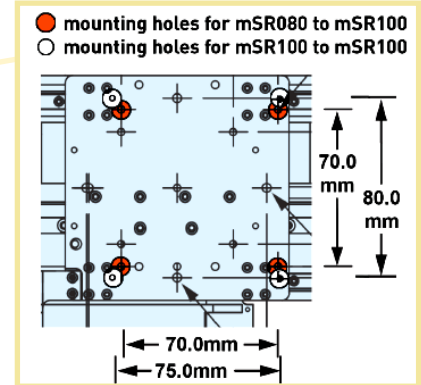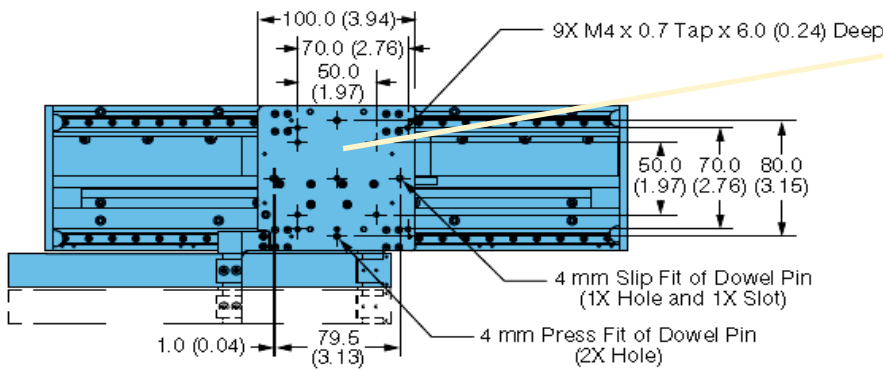


Configuration	Bolt size
mSR80—mSR100	M4 x 0.7 x 8
mSR100—mSR100	M3 x 0.5 x 10

The mSR part numbers mount directly to one another. The 4 bolts go through the center of the Y axis base to the

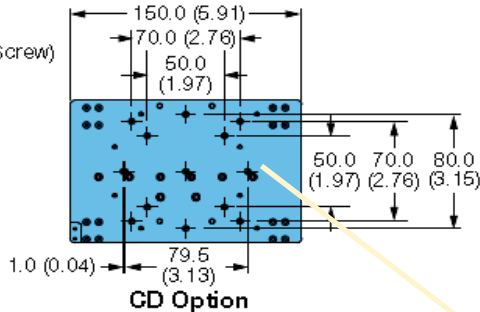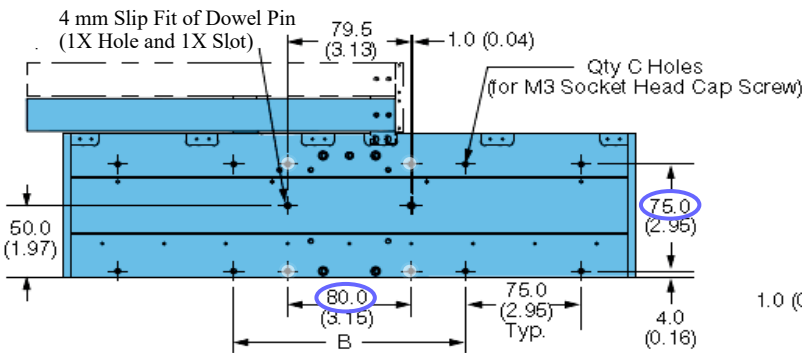


Dimensions - mm (in)

Travel (mm)		A	B	C (QTY)
LS Option	LD Option			
25	-	145 (5.71)	100 (3.94)	8
50	-	170 (6.69)	125 (4.92)	8
100	50	220 (8.66)	150 (5.91)	8
150	100	270 (10.63)	200 (7.87)	8
200	150	320 (12.60)	125 (4.92)	12
250	200	370 (14.57)	150 (5.91)	12
300	250	420 (16.54)	200 (7.87)	12
350	300	470 (18.50)	125 (4.92)	16
400	350	520 (20.47)	150 (5.91)	16
450	400	570 (22.44)	200 (7.87)	16
500	450	620 (24.41)	125 (4.92)	20
-	500	670 (26.38)	150 (5.91)	20

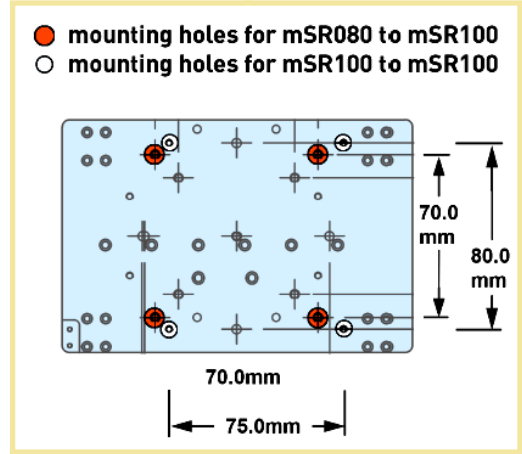

Mounting Requirements	
Hardware	SCH M3x10
Torque	12 in-lbs
Wrench Size	2.5mm Allen



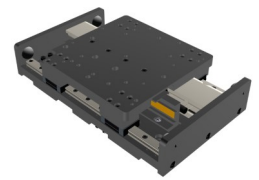

User Information Guide

Assembly Diagram - mSR100

Center Driven Ironless Linear Motor


The mSR 100 offers both a 3 and 5 pole ironless linear motor (mL18) based upon the application thrust requirements. Each of these motors have been optimized operate on 48 Volts DC.

Dual Precision Square Rails

Two precision aligned square rail bearings to support the payload and provide superior straightness and flatness.

Integrated Home and Limit Sensing

Home and limit sensors have been integrated into the mSR 100 encoder read head, and signals are passed through the same cable, minimizing the amount of cables requiring cable management.

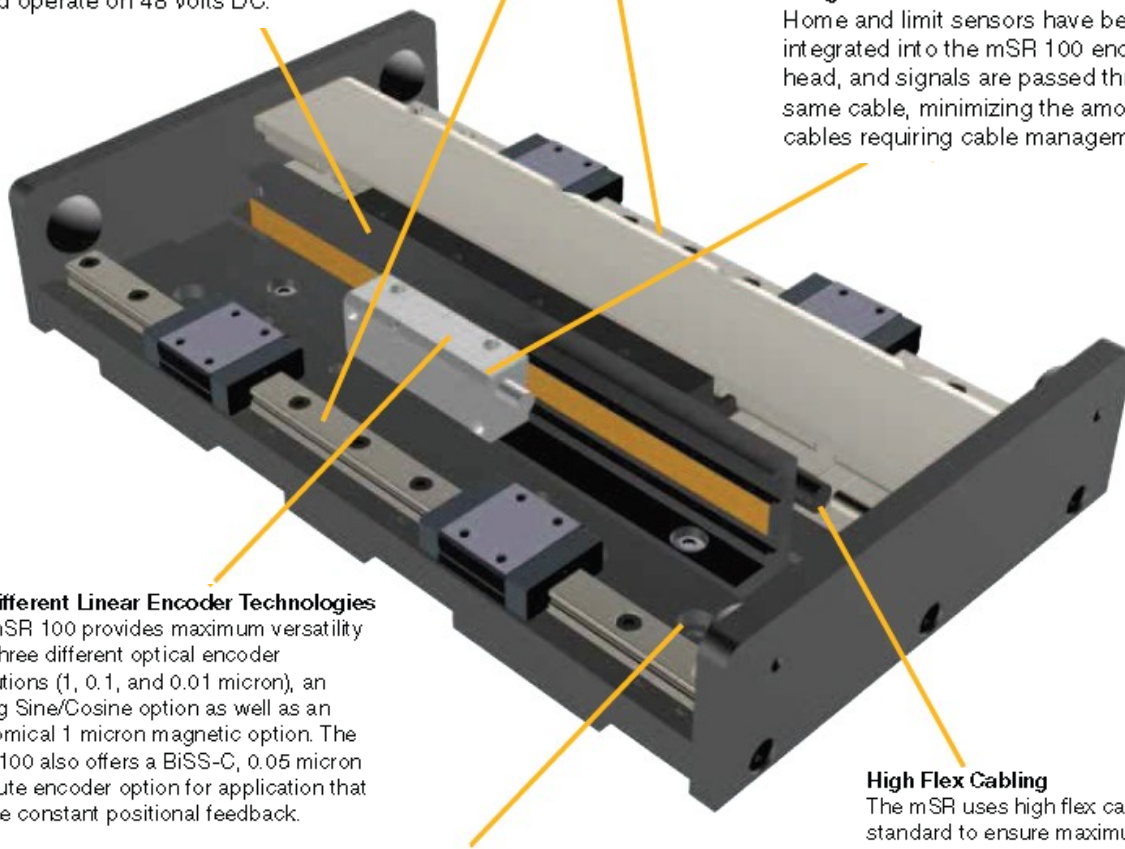

Six Different Linear Encoder Technologies

The mSR 100 provides maximum versatility with three different optical encoder resolutions (1, 0.1, and 0.01 micron), an analog Sine/Cosine option as well as an economical 1 micron magnetic option. The mSR 100 also offers a BiSS-C, 0.05 micron absolute encoder option for application that require constant positional feedback.

Tapped Holes and Dowel Pinning

The mSR has tapped holes in both the top and base for ease of mounting, and dowel pins to ensure repeatable mounting when configuring XY systems made with mSR's.


High Flex Cabling

The mSR uses high flex cabling as standard to ensure maximum life of the stage regardless if it's integrated into a multi axis system.

CE and RoHS Compliance

The mSR conforms to both CE and RoHS directives as standard.



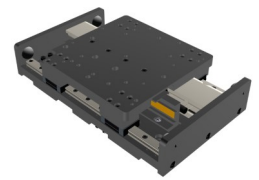

User Information Guide

Setting the Optical Encoder Limits

The mSR100 with the optical encoder option comes equipped with adjustable end of travel limit sensors. The sensors are activated by magnetic targets located in a slot on the encoder scale bracket as shown in Image #3 below. The factory setting location of the limit sensor targets provide the full nominal travel of the stage with approximately 2mm of over travel before the stage encounters the hard stop.

To adjust travel, simply loosen the screw on the target $\sim 1/4$ turn using a 1.3mm hex wrench, slide the target to the desired position, and tighten the screws.

NOTE: The active length of the target is approximately 9mm. If the target is moved greater than 9 mm from the stage hard stop, the stage can move beyond the active area of the target and shut off on the other side of the target. This can lead to having the stage behind a limit sensor. Caution in setup and programming should be taken to avoid this potential issue.

Limit sensor hysteresis: Limit sensor can have up to 1.5 mm of hysteresis which means after activation the stage must move more than 1.5 mm away from the activation point to release the limit sensor from being active.


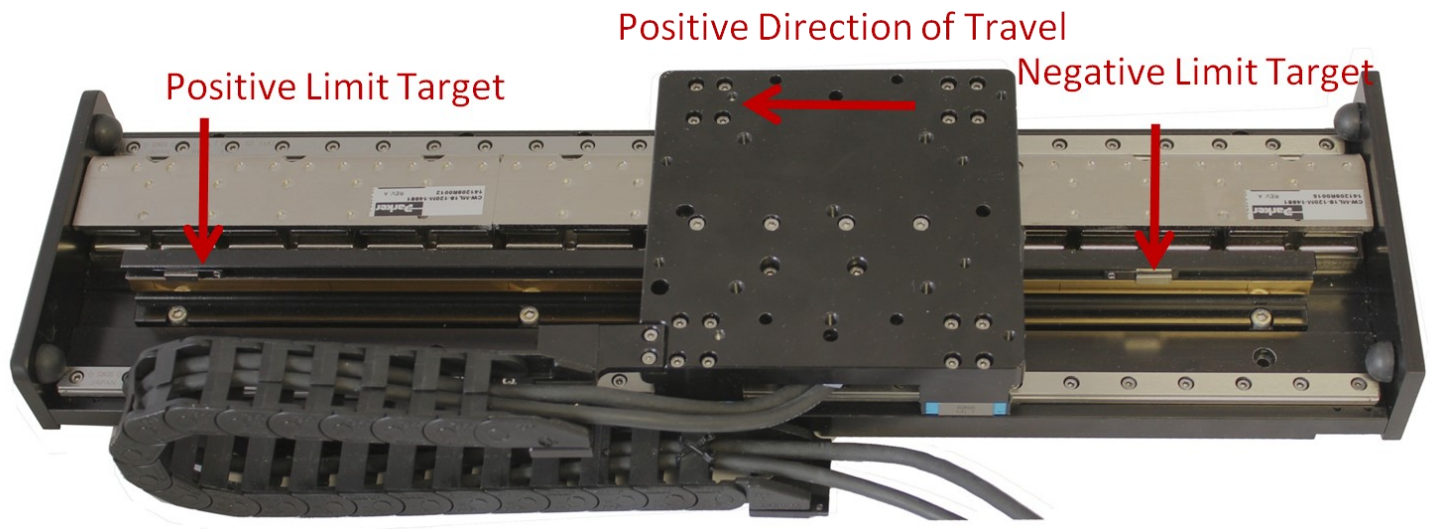


Image 3

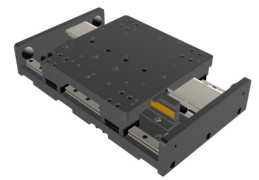

User Information Guide

Setting the Magnetic Encoder Limits

The mSR100 with the magnetic encoder option comes equipped with adjustable end of travel limit sensors and a home sensor. The sensors are activated by magnetic targets located in a slot on the encoder scale bracket as shown in image #4 below. The factory setting location of the limit sensor targets provide the full nominal travel of the stage with approximately 2mm of over travel before the stage encounters the hard stop. The home sensor is set such that during a positive direction move the home sensor trips approximately in the center of the travel of the stage.

To adjust travel, simply loosen the screw on the target $\sim 1/4$ turn using a 1.3mm hex wrench, slide the target to the desired position, and tighten the screws.

NOTE: The active length of the target is approximately 9mm, if the target is moved greater than 9 mm from the stage hard stop, the stage can move beyond the active area of the target and shut off on the other side of the target. This can lead to having the stage behind a limit sensor. Caution in setup and programming should be taken to avoid this potential issue.

Limit sensor hysteresis: Limit sensor can have up to 2 mm of hysteresis which means after activation the stage must move more than 2 mm away from the activation point to release the limit sensor from being active.

Home sensor hysteresis: Home sensor can have up to 0.6 mm of hysteresis which means after activation the stage must move more than 0.6 mm away from the activation point to release the home sensor from being active.


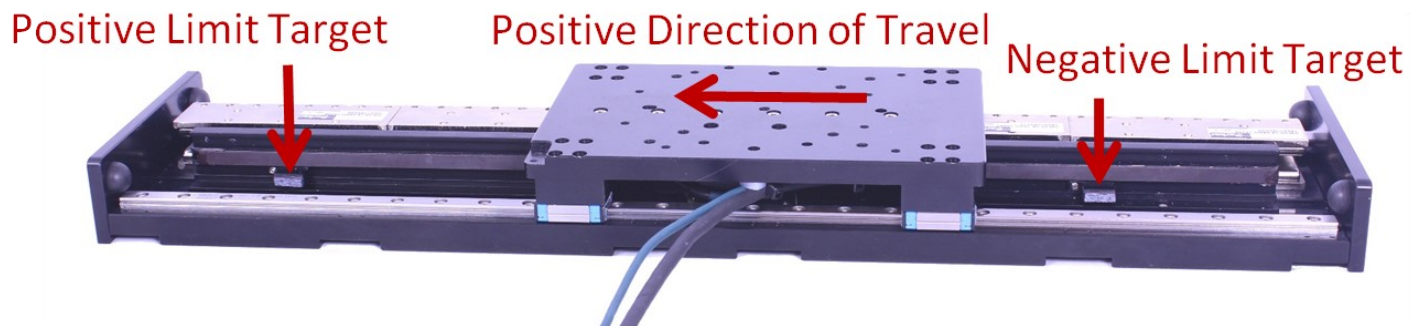


Image 4

User Information Guide

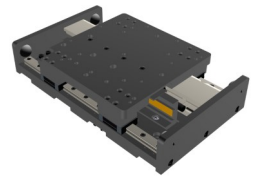

Cable Carrier

The mSR100 can be fitted with cable carriers to transport the stage cables or user cables. These cable carriers can be purchased as an option assembled to the stage at the time of order, or can be purchased as an accessory. Cable carriers are available in a single or dual version, (see image 5 and 6 below). If purchased as an accessory, mount the cable carriers as shown in accordance to the images below using the 4 flathead screws provided

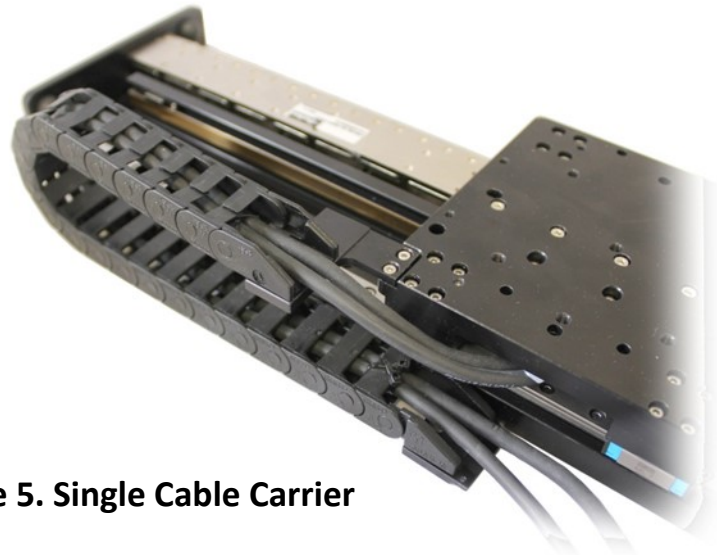


Image 5. Single Cable Carrier





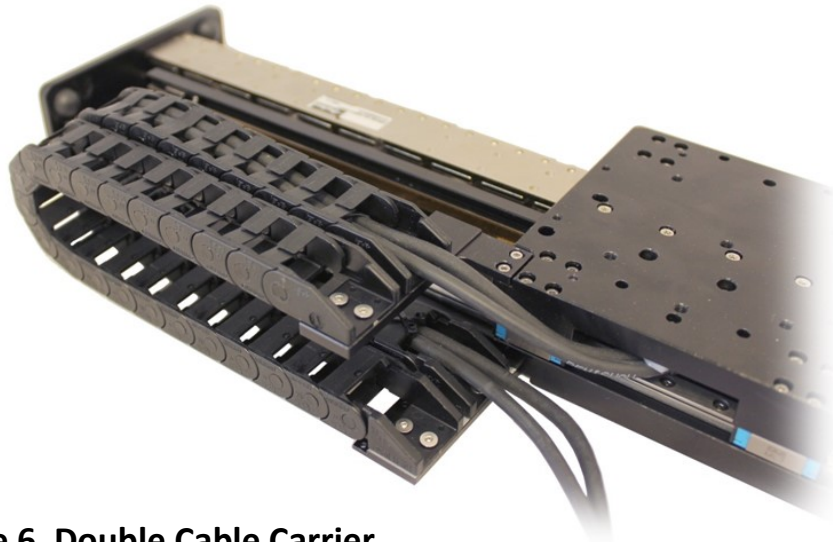


Image 6. Double Cable Carrier

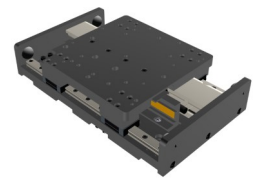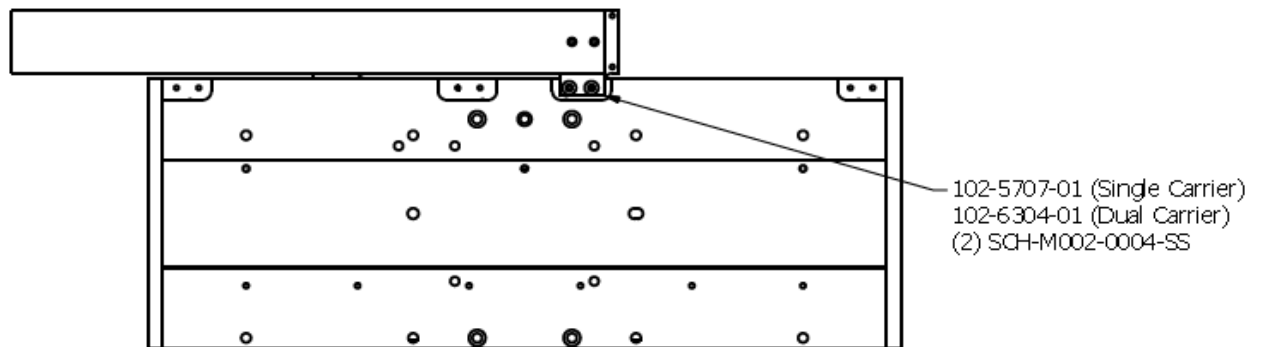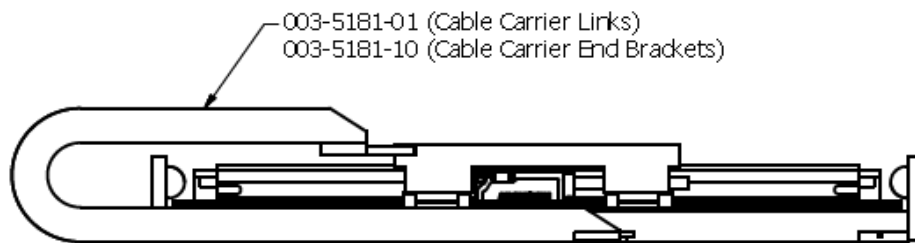


User Information Guide

Cable Carrier Mounting

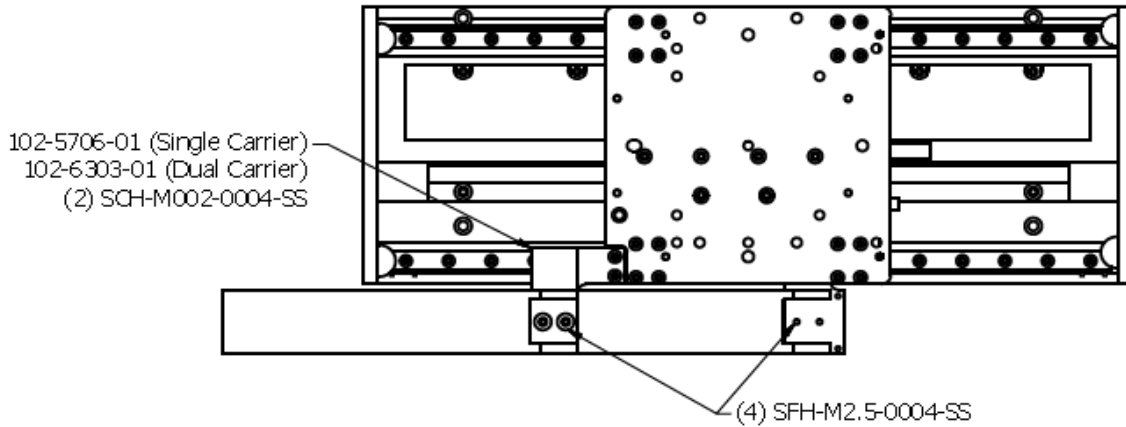

* If mounting a longer unit as a Y axis, additional cable carrier supports are recommended.



Recommended # of Additional Supports	
Base Length	# of Bracket Kits
Up to 260 mm	1
261 - 510 mm	2
511 - 660 mm	3

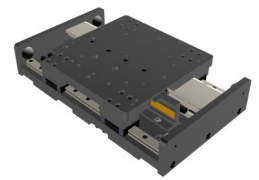

User Information Guide

Part and Serial Number Location


The mSR 100 part number and serial number can be located at the negative end of travel, on the base of the positioner, opposite the cables.

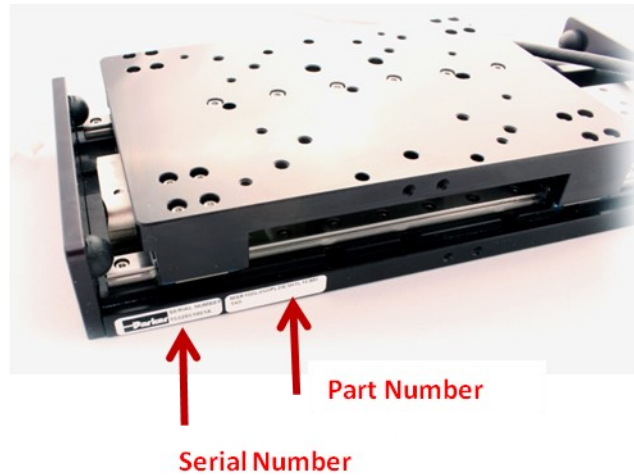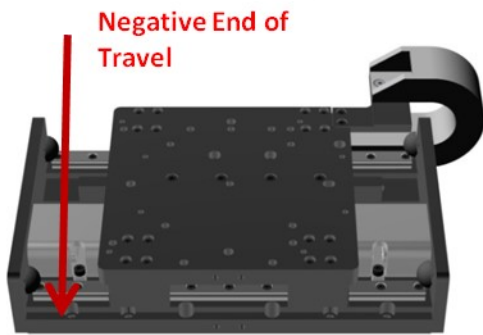

Caution and Warning Label

The mSR Caution and Warning label is located on the motor phase an hall cable (9 pin D-Sub), as pictured below.



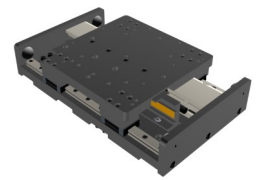

User Information Guide

Maintenance and Life Expectancy

Maintenance:


The mSR100 is designed to be a maintenance free device. The drive train is a non-contact linear motor and does not need maintenance of any kind. The linear bearings are designed with internal lubricators that provide lubrication of the bearings for the life of the stage. Beside normal cleaning of surfaces (if needed) no other maintenance is required.

Life:

The operational life of the mSR100 is limited by two primary factors, the linear bearings and the bending life of the cables. If the rated load of the stage is not exceeded, the typical bearing life is on the order of 2,540 km in a clean environment. Contamination or solvents on the bearings can result in lower life performance. The cable flex life in a cable carrier with a bend radius of 25mm is 10 million cycles. Cable flex life increases with larger bend radius.

Spare Parts

Description	Part #
Limit Kit,MSR100 Optical	002-3547-01
Limit Kit,MSR100 Magnetic	002-3548-01
Z bracket, 25-50mm	002-2238-01
Z bracket, 100-150mm	002-2240-01
Cable carrier bracket kit, Single Carrier	002-3752-01
Cable carrier bracket kit, Dual Carrier	002-3752-02

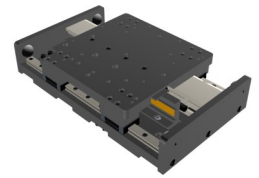

Compliance Documents



Parker Hannifin Corporation
Electromechanical Automation Div.
1140 Sandy Hill Road
Irwin, PA 15642
1-800-245-6903

RoHS Compliance Statement

We hereby certify that the following product line(s) produced by Parker Hannifin Corporation complies with the requirements of the EU Directive 2015/863 on the restriction of the use of certain hazardous substances in the electrical and electronic equipment (RoHS 3) and other national and international legislation similarly restricting the use of materials.

RoHS 3 Restricted Substances and Limits	
Lead (Pb)	< 1000 ppm
Mercury (Hg)	< 1000 ppm
Cadmium (Cd)	< 100 ppm
Hexavalent chromium (Cr VI)	< 1000 ppm
Polybrominated biphenyls (PBB)	< 1000 ppm
Polybrominated diphenyl ethers (PBDE)	< 1000 ppm
Bis(2-Ethylhexyl) phthalate (DEHP)	< 1000 ppm
Benzyl butyl phthalate (BBP)	< 1000 ppm
Dibutyl phthalate (DBP)	< 1000 ppm
Diisobutyl phthalate (DIBP)	< 1000 ppm


mSr Series

Date: June 26, 2020

Certified by: James Monnich
Engineering Manager
jmonnich@parker.com



ENGINEERING YOUR SUCCESS

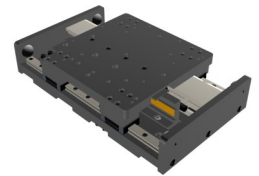

Parker Hannifin Corporation
 Electromechanical Automation Div.
 1140 Sandy Hill Road
 Irwin, PA 15642
 1-800-245-6903

DECLARATION OF INCORPORATION

ACCORDING TO EC DIRECTIVE 2006/42/EC (ANNEX II, PART 1, SECTION B) FOR PARTLY COMPLETED MACHINERIES

DECLARATION NO.	
MANUFACTURER	PARKER HANNIFIN DAEDAL
AUTHORIZED PERSON	James Monnich
ADDRESS	Electromechanical Automation Div. 1140 Sandy Hill Road Irwin, PA 15642
PRODUCT	mSR Series Positioners
MODEL/TYPE	mSR080, mSR100
SERIAL NO.	From:
YEAR OF MANUFACTURE	From: 2015

The above mentioned Manufacturer/Authorized person declare that the product is complying with the following essential requirements of the machinery directive 2006/42/EC.
 Annex 1, Article 1.1.1, 1.1.2, 1.1.3, 1.1.5, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.7, 1.4.1, 1.5.4, 1.5.8, 1.6.1

EN ISO 12100	Safety of Machinery— basic concepts.
EN 60034-1	Rotating electrical machines— Part 1: Rating and performance
EN 60034-5	Rotating electrical machines - Part 5: Degrees of protection provide by the integral design (IP code)
EN 60034-18	Rotating electrical machines - Part 18-1: Functional evaluation of insulation systems
EN/IEC 60204-1	Safety of machinery - Electrical equipment of machines - Part 1: general requirements
EN 60085	Electrical Insulation— Thermal evaluation and designation
EN 349	Safety of Machinery— Minimum gaps to avoid crushing of parts of the human body
2015/863/EU	Restriction of the use of certain hazardous substances

These products must be installed and operated with reference to the instructions in the Product Manual. All instruction, warnings and safety information of the Product Manual must be adhered to.

The partly completed machinery must not be put into service until the final machinery, into which it is to be incorporated, has been declared in conformity with the provisions of directive 2006/42/EC on machinery.

The machinery related special technical documentation according annex VII B has been created

The manufacturer commits to transmit, in response to a reasoned request by the market surveillance authorities, relevant documents on the partly completed machinery electronically by our documentation department. The intellectual rights of the manufacturer of the incomplete machine are not affected.


James Monnich, Engineering Manager
 June 26, 2020



ENGINEERING YOUR SUCCESS



User Information Guide

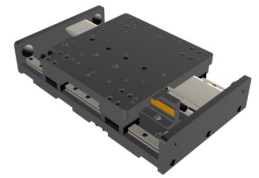

EM Sales Offices

Australia

Parker Hannifin (Australia) Pty Ltd.
9 Carrington Road
Castle Hill NSW 2154
Australia
Tel: +61 (0) 2 9634-7777
Fax: +61 (0) 2 9634 3749

Brazil

Parker Hannifin Ind. Com Ltda.
Av. Lucas Nogueira Garcez 2181
Esperança
12325-900 Jacareí, SP
Tel: 12 3954 5100
Fax: 12 3954 5262
Email: automation.brazil@parker.com

Canada

Parker Hannifin (Canada) Inc.
160 Chisholm Dr
Milton, Ontario L9T 3G9
Tel: 905-693-3000
Fax: 905-876-1958
Email: miltoncustservice@parker.com

China

**Parker Hannifin Motion & Control
(Shanghai) Co., Ltd**
280 Yunqiao Rd. Jin Qiao Export
Processing Zone
Shanghai 201206, China
Tel: (86-21) 50312525
Fax: (86-21) 64459717

France

Parker SSD Parvex
8 avenue du Lac
B.P. 249
F-21007 Dijon Cedex
Tel: +33 (0) 3 80 42 41 40
Fax: +33 (0) 3 80 42 41 23

Germany

**Electromechanical Europe
Parker Hannifin GmbH & Co KG**
Robert-Bosch-Strasse 22
D-77656 Offenburg
Germany
Tel: +49 (0) 781 509 0
Fax: +49 (0) 781 509 98176

India

**Parker Hannifin India Pvt. Ltd
Automation Group-SSD Drives Div.**
133 & 151 Developed Plots Estate
Perungudi, Chennai 600 096
Tel: 044-4391-0799
Fax: 044-4391-0700

Italy

Parker Hannifin SpA
Via Gounod 1
20092 Cinsello Balsamo
Milano, Italy
Tel: +39 02 361081
Fax: +39 02 36108400

Korea

Parker Hannifin Korea
9th Floor KAMCO Yangjae Tower
949-3 Dogok 1-dong Gangnam-gu
Seoul 135-860, Korea
Tel: 82-2-559-0454
Fax: 82-2-556-8187

Mexico

Parker Hannifin de Mexico
Eje uno Norte No.100
Parque Industrial Toluca 2000
Toluca, CP 50100 México
Tel: 52-722-275-4200
Fax: 52-722-279-0316

Singapore

Parker Hannifin Singapore Pte Ltd
11, Fourth Chin Bee Road
Singapore 619702
Tel: (65) 6887 6300
Fax: (65) 6265 5125/6261 4929

Taiwan

Parker Hannifin Taiwan Co., Ltd
No. 40, Wuchiuan 3rd Road
Wuku Industrial Park
Taipei County, Taiwan 248
ROC
Tel: 886 2 2298 8987
Fax: 886 2 2298 8982

Thailand

Parker Hannifin (Thailand) Co., Ltd.
1023, 3rd Floor, TPS Building,
Pattanakarn Road,
Suanluang, Bangkok 10250
Thailand
Tel: (66) 02717 8140
Fax: (66) 02717 8148

UK

Parker Hannifin Ltd.
Tachbrook Park Drive
Tachbrook Park
Warwick CV34 6TU
Tel: +44 (0) 1926 317970
Fax: +44 (0) 1926 317980

USA

**Parker Hannifin Electromechanical
Automation Division Main Office/
Compumotor/CTC**
5500 Business Park Drive
Rohnert Park, CA 94928 USA
Tel: 707-584-7558
800-358-9070
Fax: 707-584-8015
Email: emn_support@parker.com

**Parker Hannifin Electromechanical
Automation Division/Daedal**
1140 Sandy Hill Road
Irwin, PA 15642
Tel: 724-861-8200
800-245-6903
Fax: 724-861-3330
Email: ddlicat@parker.com